


## DALLA CORTE

### Replacing the sealing ring

#### 1. General Information

Replacing the sealing ring of a Dalla Corte espresso machine needs the key, a screwdriver and a hammer.

Attention: The sealing ring is easier to remove when the coffee group is warm. Be aware of the heat of the group head, it's better to wear gloves.

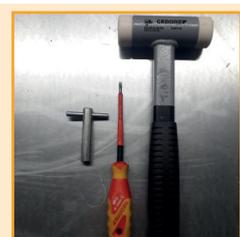

#### 2. Remove the shower holder

Remove the shower holder with the key.  
Clean the shower holder and the screw with water and a brush.



#### 3. Remove the sealing ring

Remove the rubber by placing the screwdriver in the rubber, and give a few taps with the hammer and lever to pull the green sealing ring.

Be careful not to slip away and damage the espressomachine with your screwdriver.



#### 4. Cleaning

Clean the group head with a non abrasive brush to remove all the ground coffee.



#### 5. Replace

Place the new sealing ring into the group head.

Put the portafilter onto the group head to assure the sealing ring is placed on the right position.

Replace the screw and cleaned shower holder using the key. Be aware not to put too much strength to it.

Rinse the group head with at least 500g water to clean the changed parts.

